

AMM-150-2 PA SYSTEM QUICK GUIDE




General Power-Up

1. Turn down MASTER and other VOLUME controls and set BASS and TREBLE to the 12 o'clock position
2. Connect all wired inputs that will be needed to the amplifier (see sections below)
3. Switch the POWER button to the ON position (if the POWER LED is not lit, check the mains supply)
4. Gradually increase MASTER and other VOLUME controls to the required level.
5. After use, turn down MASTER, switch POWER off and remove all connections and retract antenna

Wired microphones

1. Connect 1 or 2 microphones to INPUT 1 or 2 via jack or XLR
2. Set the slide switch on each microphone channel to MIC
3. If a condenser microphone requires phantom power, set the slide switch to PHANTOM
4. Turn MASTER up
5. Gradually increase each VOLUME and check for output through speakers

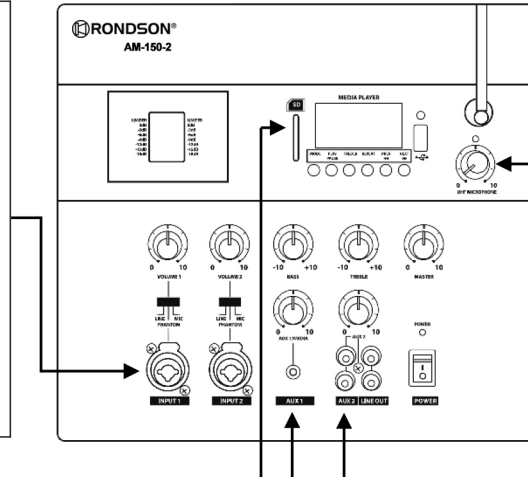

Wireless microphone

1. Extend the UHF Antenna fully (do not close the door whilst extended)
2. Ensure handset has 2 x AA batteries installed
3. Slide up switch on the handheld microphone to the ON position
4. Turn MASTER up
5. Gradually increase UHF MICROPHONE volume and check for output through speakers

Media Player and Line Inputs

1. For Bluetooth connection, press the MODE button until the display shows "Bluetooth". Search for device ID "Bluetooth" and connect
2. For playback of mp3 files from USB or SD card, insert the media into the player and use the buttons beneath the display to navigate
3. A smartphone, laptop or mp3 player can be connected to AUX 1 and controlled by the MEDIA volume control
4. AUX 2 can accept a line input (CD player, DVD player, TV box computer etc.) and is independent of the media player
5. Other mono line inputs can be connected to INPUT 1 or 2 by setting the slide switch to LINE